

FS-MA 1000C



General User and Maintenance Instructions

8614 Veterans Memorial. Houston, Texas, 77088 832/327-7452 800/972-7668 Fax: 832/327-0668 E-mail: silentaire@silentaire.com Thank you and congratulations on the purchase of your **SCORPION** compressor. The **SCORPION** is built to the highest quality standards which produce excellent efficiency. If you use it properly and maintain it according to this manual, it will perform to your fullest satisfaction form many years to come. Please read this manual, carefully and follow the instructions, it will guarantee you a troublefree operation.

A. Installation

- 1. After taking your **SCORPION** compressor out of its packaging, please check it carefully for any damages due to shipping.
- 2. Install the compressor on a flat surface in a suitably sized, dry room with good ventilation, where the temperature is not likely to rise above 94 Degrees Farenheit (35 Centigrades).
- 3. Dispose of the packing material in compliance with the regulations in the country or state where the compressor is installed.

B. <u>Safety</u>

- 1. Do Not use the OILLESS compressor for purposes other than those for which it has been designed.
- 2. Do Not modify or repair the compressor while it is connected to the electric current.
- 3. Note: The electric outlet has to be properly installed and grounded!






This "bolt of lightning" indicates uninstalled material within your unit may cause an electrical shock. For the safety of everyone please do not remove product covering.

The "exclamation point" calls attention to features for which you should


read the enclosed literature closely to prevent operating and maintenance problems.

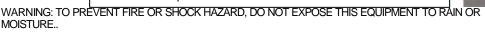

C. **Operating Instructions**

- 1. Connect the equipment for your application to the outgoing ¼" male fitting at the front of the cylinder head. To keep the connecting fitting from leaking air you should always apply Teflon Tape to the thread of the fitting.
- 2. When the compressor gets hot from constantly producing compressed air, it automatically shuts off. After waiting for about 20 minutes to cool down, it will start working again.

EXPLODED VIEW AND PARTS LIST FS-MA-1000C

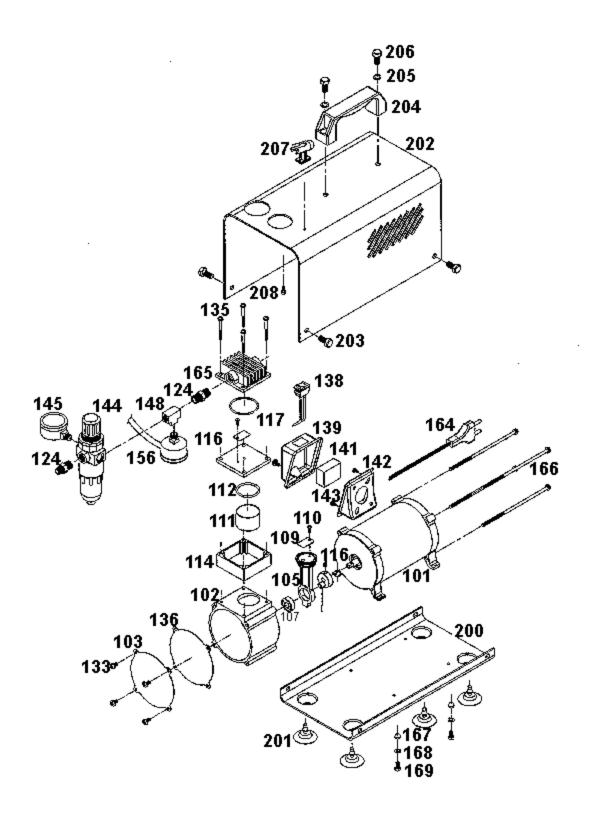

8614 Veterans Memorial. Houston, Texas, 77088 832/327-7452 800/972-7668 Fax: 832/327-0668 E-mail: silentaire@silentaire.com

| 101 | Motor | 143 | Bolt |
|-----|----------------------------------|-----|---------------------------------|
| 102 | Housing, Front | 144 | Filter/Regulator |
| 103 | Cover, Front | 145 | Gauge (Line-pressure) |
| 105 | Piston – Rod | 148 | 3-Way Connector |
| 106 | Ball Bearing | 156 | Pressure Switch |
| 107 | Crankshaft | 164 | Electric Cable |
| 108 | Bolt | 165 | Cylinder Head with cooling fins |
| 109 | Inlet and Exhaust Plate | 166 | Bolt |
| 110 | Bolt | 167 | Nut |
| 111 | Cylinder | 168 | Washer |
| 112 | Compressing Ring | 169 | Bolt |
| 114 | Cylinder Base | 200 | Base Plate Mod. FS-MA-1000C |
| 115 | O-Ring | 201 | Rubber Foot |
| 116 | Valve Plate (set) | 202 | Housing Mod. FS-MA-1000C |
| 117 | O-Ring | 203 | Bolt |
| 124 | Fitting M1/4" – F1/8" | 204 | Handle |
| 133 | Bolt | 205 | Washer |
| 136 | Gasket | 206 | Bolt |
| 138 | On/Off Switch | 207 | Airbrush Holder |
| 139 | Housing for Capacitor and on/off | 208 | Bolt |
| | Switch | | |
| 140 | Base Plate for Housing | | |
| 141 | Capacitor | | |
| 142 | Bolt | | |